

CUCKOO

Mechanical type Electric Rice cooker/warmer 기계식 전기 밥솥



Operating Instructions 사용설명서

CR-1051(Series)

저희 쿠쿠 전기 밥솥을 구입해 주셔서 대단히 감사드립니다.

이 설명서를 잘 읽으시고 사용방법에 따라 정확하게 사용하십시오. 그리고 설명서는 보관해 두었다가 필요할 때 보시면 아주 유용합니다.

목차

한글 사용설명서

important safeguards	2
제품규격	3
안전상의 경고 및 주의	4
각 부분의 이름	8
사용방법	9
손질 방법	11
고장시 확인 사항	12
Limited warranty	23

我們衷心地感謝 購買此物。為了充分地發揮本品的機能，儘而有效地利用它，請您在使用前從頭至尾地閱讀本說明書，讀后請您保存好，為使用時萬一有不明白的地方或發生不良狀況時，請熟讀后好好保存它。

Chinese instruction manual

important safeguards	2
製品規格	3
零件名稱	8
注意事項	13
使用方法	14~15
清潔方法	15
Limited warranty	23

Thank you very much for purchasing "CUCKOO" Electric Rice cooker/warmer

Read all instructions before use.
Save these instructions for future reference.

Contents

English instruction manual

important safeguards	2
Specifications	3
Description of each part	8
Caution for safety	16
How to use	18
How to clean	19
Limited warranty	23

Para el mejor uso de este producto, por favor lea estas instrucciones antes de usarlo y guardelas para su referencia.

Spanish instruction manual

importantes medidas de seguridad	2
Identificación de partes	20
Como usarla	21
Para mantener el arroz cocido, caliente y sabroso	22
Especificaciones	22
Limited warranty	23

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following :

- ▶ Read all instructions.
- ▶ Do not touch hot surfaces. Use handles or knobs.
- ▶ To protect against electrical shock do not immerse cord, plugs in water or other liquid
- ▶ Close supervision is necessary when any appliance is used by or near children.
- ▶ Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- ▶ Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to your nearest authorized service facility for examination, repair, or electrical or mechanical adjustment.
- ▶ If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent
- ▶ The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- ▶ Do not use outdoors.
- ▶ Do not let cord hang over edge of table or counter, or touch hot surfaces
- ▶ Do not place on or near a hot gas or electric burner, on in a heated oven.
- ▶ Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- ▶ Always attach plug to appliance first, then plug cord into wall outlet. To disconnect, turn any control to “off”, then remove plug from wall outlet.
- ▶ Do not use appliance for other than intended use.
- ▶ Do not obstruct the steam vent hole with any articles, e.g.a piece of cloth.
- ▶ Do not place the inner pot directly over flame for cooking.

SAVE THESE INSTRUCTIONS.

THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY.

ADDITIONAL SAFEGUARDS

- ▶ Avoid touching hot parts : outer lid, inner pot, inner lid and especially the steam vent hole.
- ▶ Do not switch on when the main body is empty.
- ▶ Make sure that heating plate and the magnetic switch are clean and dry whenever putting the inner pot into the cooker.
- ▶ Do not use sharp instruments to clean the inner pot as these will damage the non-stick coating.
- ▶ A short power-supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- ▶ Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.

SHORT CORD INSTRUCTIONS/SPECIFICATIONS

Note : A. A short power-supply cord (or cord set) is to be provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord.

B. Longer cord set or extension cords are available and may be used if care is exercised in their use.

C. If a long cord set or extension cord is used

- (1) the marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
- (2) if the appliance is of the grounded type, the extension cord should be a grounding-type three-wire cord, and
- (3) the longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over accidentally.

This appliance has a polarized plug : (one blade is wider than the other)

As a safety feature, this plug will fit in a polarized outlet only one way.

If the plug does not fit fully in the outlet, reverse the plug.

If it still does not fit, contact a qualified electrician.

 
Do not attempt to defeat this safety feature.

CAUTION : During use, the internal parts of the rice cooker and the area around the steam vent are **HOT**.
Keep out of reach of children to avoid possible injury.

제품규격/Specifications/規格

전원/Power supply/額定電壓		AC 120V, 60Hz
소비전력/Power consumption/ 額定消耗功率 (approx) W	취사/Cooking/炊飯	650W
	보온/Keeping Warm/ 保温	83W
취사용량/Cooking Capacity /炊飯容量 L (Cups)	백미/White rice/白米	0.36-1.8L(2-10Cups)
	현미/Brown rice/玄米	0.36-1.44L(2-8Cups)
코드길이/Power cord length/電線長度 m (ft)		1.4m/4.6ft/1.4米
외형크기/Dimension/尺寸 cm (in)	폭/Width/深	33.5cm(13.2in)
	길이/Length/濶	35.6cm(14in)
	높이/Height/高	29.5cm(11.6in)

IDENTIFICACION DE PARTES

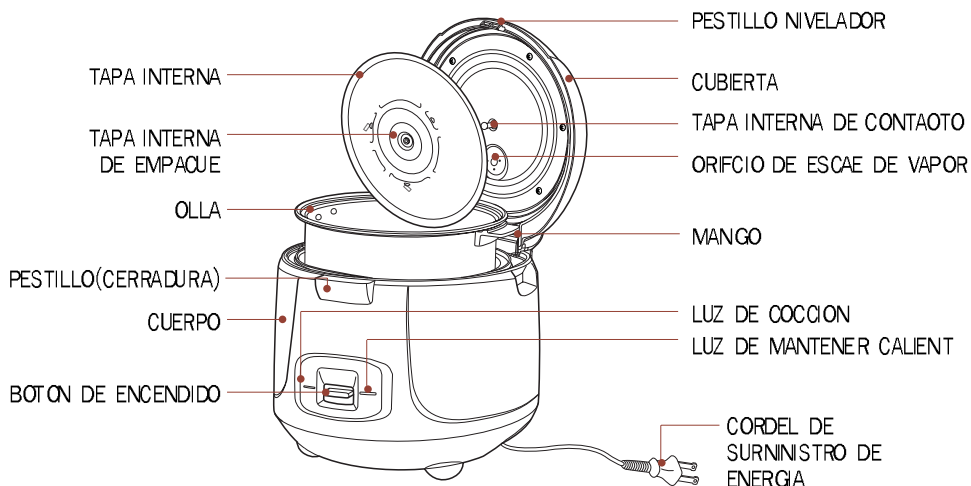

TAPA INTERNA



ACCESORIOS



TAZA MEDIDORA



CUCHARON DE ARROZ

ESPECIFICACION DE PRODUCTO


Suministro de energia	AC 120V, 60Hz	
Consumion de energia (approx.) W	Cocina	650W
	Mantenimiento del calor	83W
Capacidad de cocina L (Cups)	Arroz blanco	0.36-1.8L (2-10Cups)
	Arroz integral	0.36-1.44L (2-8Cups)
Largo de cordel m (ft)	1.4m/4.6ft	
Dimension cm (in)	Anchura	33.5cm (13.2in)
	Largo	35.6cm (14in)
	Altura	29.5 cm (11.6in)

COMO USARLA


- 1) Mida la cantidad deseada de arroz con la taza medidora, que viene con la olla arrocera. la Cantidad de una taza de arroz crudo equivale a 2 tazas de arroz cocido.



 
- 2) Enjuague el arroz en un recipiente separado varias veces hasta que el agua deje de ser clara.

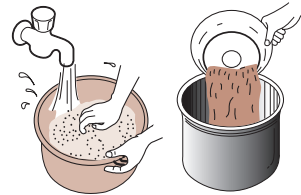

 
- 3) Ponga la cantidad deseada de arroz y agua en la olla.
 *(Por Ejemplo) si 6 tazas de arroz son puestas en la olla, entonces debemos verter el agua hasta el nivel "6", que aparece en la escala dentro de la olla.

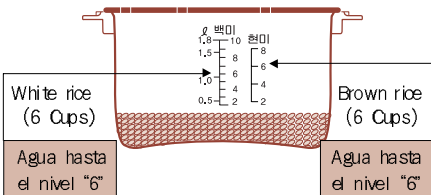

 - 4) Inserte la olla en la arrocera. Asegurese que la olla tenga contacto directo con el plato de calentamiento, moviendola de derecha a izquierda hasta que encaje perfectamente.

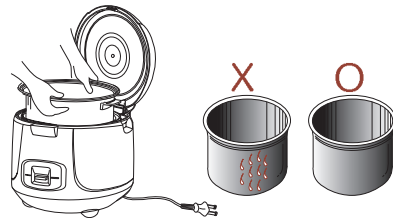

 - 5) Cuando el arroz este cocido el boton de encendido subira y se usuchara un pequeno timbre. Al mismo tiempo, la luz de "COOK" (cocinando) se apagara y aparecera la luz de "WARM" calentanco, lo que significa que la funcion de calentamiento esta trabajando.
 ■ El boton de encendido no debe ser manipulado a "COOK" mientras este en "WARM"

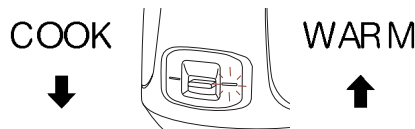


- 6) Despues de haber hervido, simplemente presione el boton que abre la tapa y abrala. No olvide remover el arroz con el cucharon.

PARA MANTENER EL ARROZ COCIDO, CALIENTE Y SABROBO


1) Lavar el arroz.

 La suciedad del arroz crudo, Da un mal olor al arroz, una vez que esta cocido. Es por eso que debe lavar muy bien el arroz. Para eliminar facilmente la suciedad, use agua tibia.

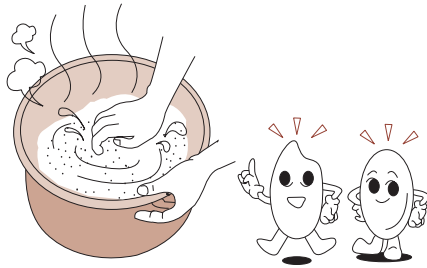

2) Tome el tiempo de calentamiento

 Mantener la funcion de calentamiento por mas de 12 horas causaria una decoloracion al arroz o que este adqpte un mal olor. Mientras mas pronto se sirva el arroz, mejor sabor tendra.

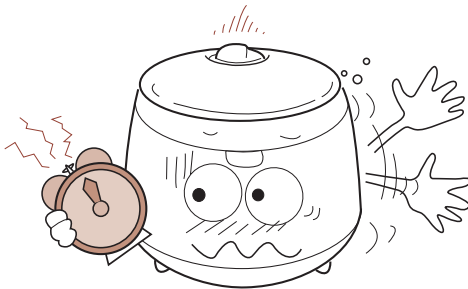

3) Cantidad de arroz que se debe mantener caliente

Asegurese que la cantidad de arroz que se mantendra caliente no sea muy pequena.

CUCKOO ELECTRONIC RICE COOKER/WARMER LIMITED WARRANTY

KEY Company, R&H Enterprise INC, Cuckoo Trading Canada will repair at its option replace, without charge, your product which proves to be defective in material or workmanship under normal use, during the warranty period listed below from the date of original purchase. This warranty is good only to the original purchaser of the product during the warranty period. R&H Covers the east and the central districts, KEY Company covers the west and the Central Districts, Cuckoo Trading Canada covers the whole Canada.

WARRANTY PERIOD

MODEL#	#LABOR	PARTS	HOW SERVICE IS HANDLED
CR-1051	1YEAR	1YEAR	<p>The East and the Central Districts Call : 718 888 9144 Address : 14-10, 123rd Street, College Point, NY 11356, USA</p> <p>The West and the Central Districts. Call : 213 687 9828 Address : 700, Jackson Street, L.A, CA 90012, USA Canada (Toronto) Call : 416 878 4561 / 416 250 7228 Address : 7289 Young Street Glen Cameron Center Unit 2 Thornhill Ontario L3 Canada (Vancouver) Call : 604 540 1004 / 604 523 1004 Address : 945 Lougheed HWY Coquitlam BC CANADA V3K 3T4</p>

No other express warranty is applicable to this product. **THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. CUCKOO ELECTRONICS CO.,LTD, SHALL NOT BE LIABLE FOR THE LOSS THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY APPLICABLE TO THIS PRODUCT.**

Some states do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts : so these limitations or exclusions may apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

THE ABOVE WARRANTY DOES NOT APPLY IN THESE CASES:

- * To damages problems which result from delivery or improper installation.
- * To damages problems which result from misuse, abuse, accident, alteration, or incorrect electrical current or voltage.
- * To serve call which do not involve defective workmanship or material and explaining the operation of the unit.

Therefore, these costs are paid by the consumer.

Customer assistance numbers :

To Prove warranty Coverage : ► **Retain your Sales Receipt to prove date of purchase**
 ► **Copy of your Sales Receipt must submitted at the time warranty service is provided.**

To Obtain Product, Customer, or Service Assistance and Nearest Authorized service center, Parts Distributor or Sales Dealer:

<p>The East and the Central Districts Call : 718 888 9144 Address : 14-10, 123rd street, college point, NY 11356, USA</p>	<p>The west and the Central Districts. Call : 213 687 9828 Address : 700, Jackson Street, L.A, CA 90012, USA</p>	<p>Canada (Toronto) Call : 416 878 4561/ 416 250 7228 Address : 7289 Young Street Glen Cameron Center Unit 2 Thornhill Ontario L3</p>	<p>Canada (Vancouver) Call : 604 540 1004 / 604 523 1004 Address : 945 Lougheed HWY Coquitlam BC CANADA V3K 3T4</p>
---	--	---	---